

# TORQUE FORCE RED POWER RANGER™

Item #29007

# TORQUE FORCE BLACK POWER RANGER™

Item #29008

# TORQUE FORCE BLUE POWER RANGER™

Item #29009

# MEGA TORQUE RED POWER RANGER™

Item #29161

**WARNING:**  
CHOKING HAZARD - Small parts.  
Not for Children under 3 years.

**CAUTION: PLEASE READ BEFORE PLAYING WITH TOY**

 
- Do not: 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone.
- Be careful not to pinch fingers with hinged parts of toy.

**CAUTION:** Keep batteries away from children. Batteries may be harmful if swallowed. Requires 2 LR44 batteries. Batteries included. **NOTE:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly.



**HOW TO REPLACE BATTERIES**

- Use screwdriver (+) and turn counter-clockwise to remove battery cover as shown.
- To replace 2 LR44 batteries (batteries included). Note the battery polarity as shown.
- Fasten the lid with screwdriver.

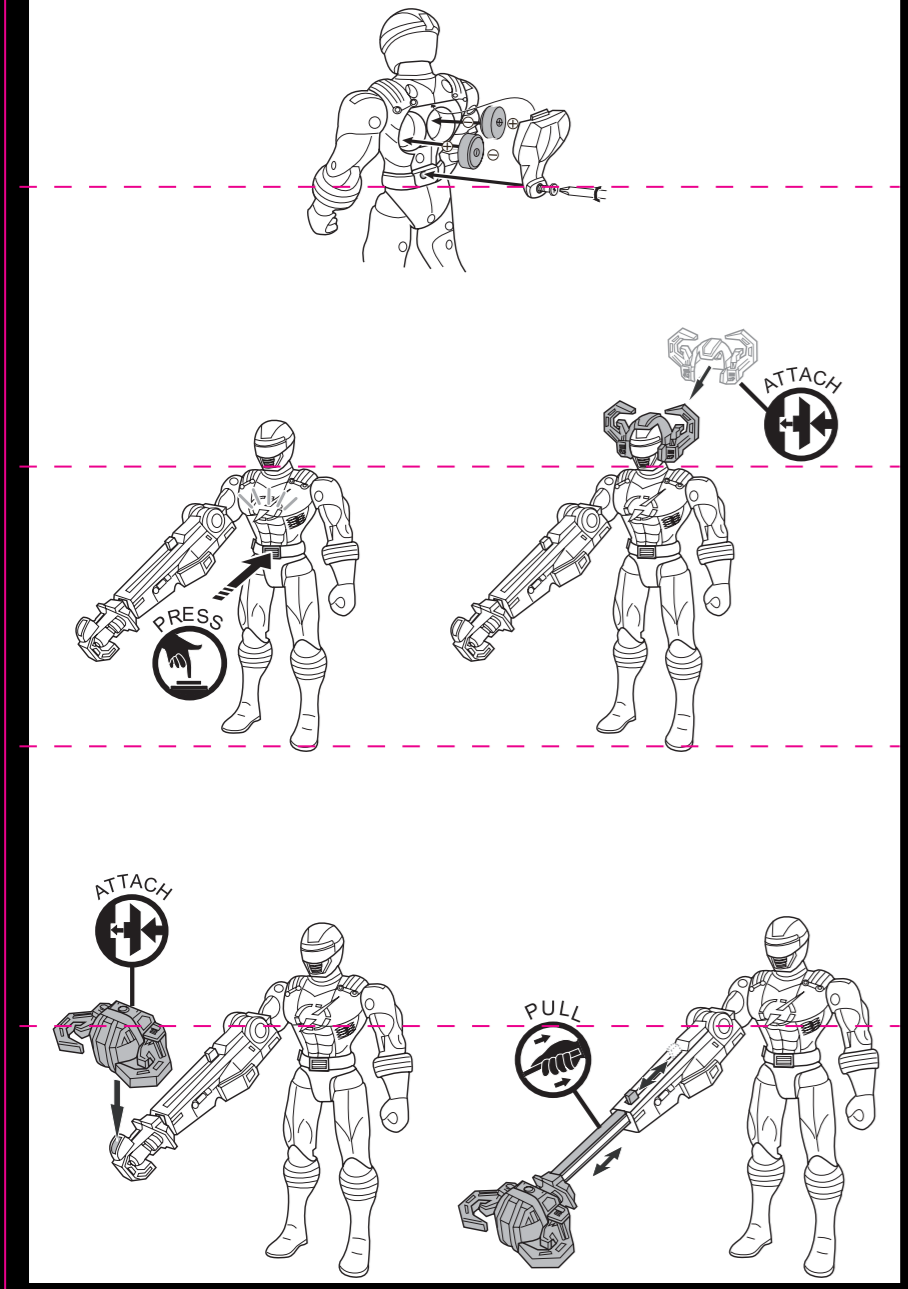


**WARNING:**  
CHOKING HAZARD - Small parts.  
Not for Children under 3 years.

**CAUTION: PLEASE READ BEFORE PLAYING WITH TOY**

 
- Do not: 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone.
- Be careful not to pinch fingers with hinged parts of toy.

**CAUTION:** Keep batteries away from children. Batteries may be harmful if swallowed. Requires 2 LR44 batteries. Batteries included. **NOTE:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly.

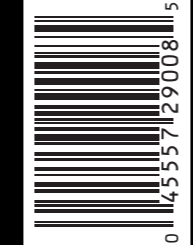

**HOW TO REPLACE BATTERIES**

 - Use screwdriver (+) and turn counter-clockwise to remove battery cover as shown.
- To replace 2 LR44 batteries (batteries included). Note the battery polarity as shown.
- Fasten the lid with the screwdriver.

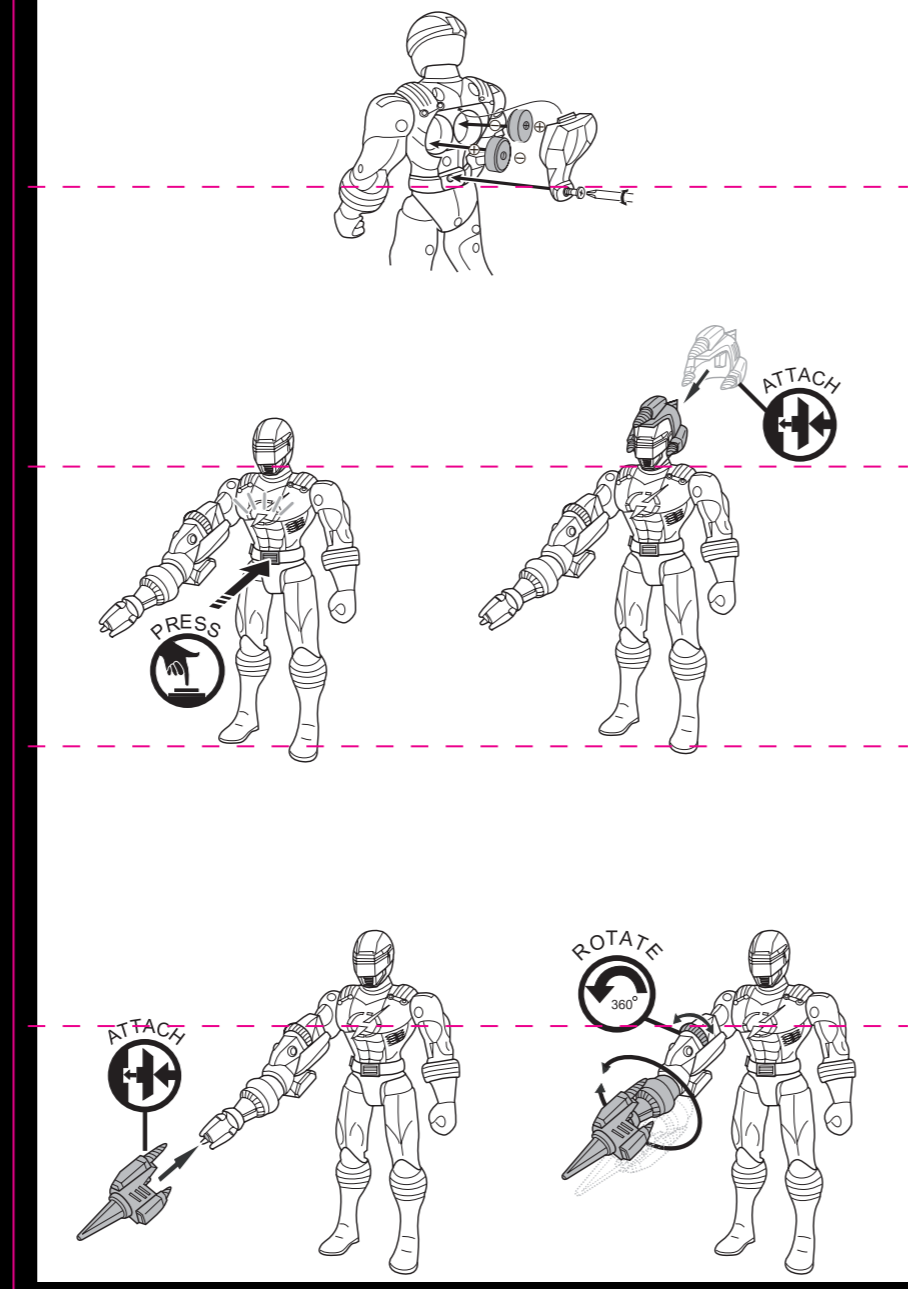


**WARNING:**  
CHOKING HAZARD - Small parts.  
Not for Children under 3 years.

**CAUTION: PLEASE READ BEFORE PLAYING WITH TOY**

 
- Do not: 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone.
- Be careful not to pinch fingers with hinged parts of toy.

**CAUTION:** Keep batteries away from children. Batteries may be harmful if swallowed. Requires 2 LR44 batteries. Batteries included. **NOTE:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly.

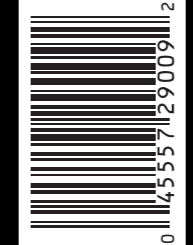

**HOW TO REPLACE BATTERIES**

 - Use screwdriver (+) and turn counter-clockwise to remove battery cover as shown.
- To replace 2 LR44 batteries (batteries included). Note the battery polarity as shown.
- Fasten the lid with the screwdriver.

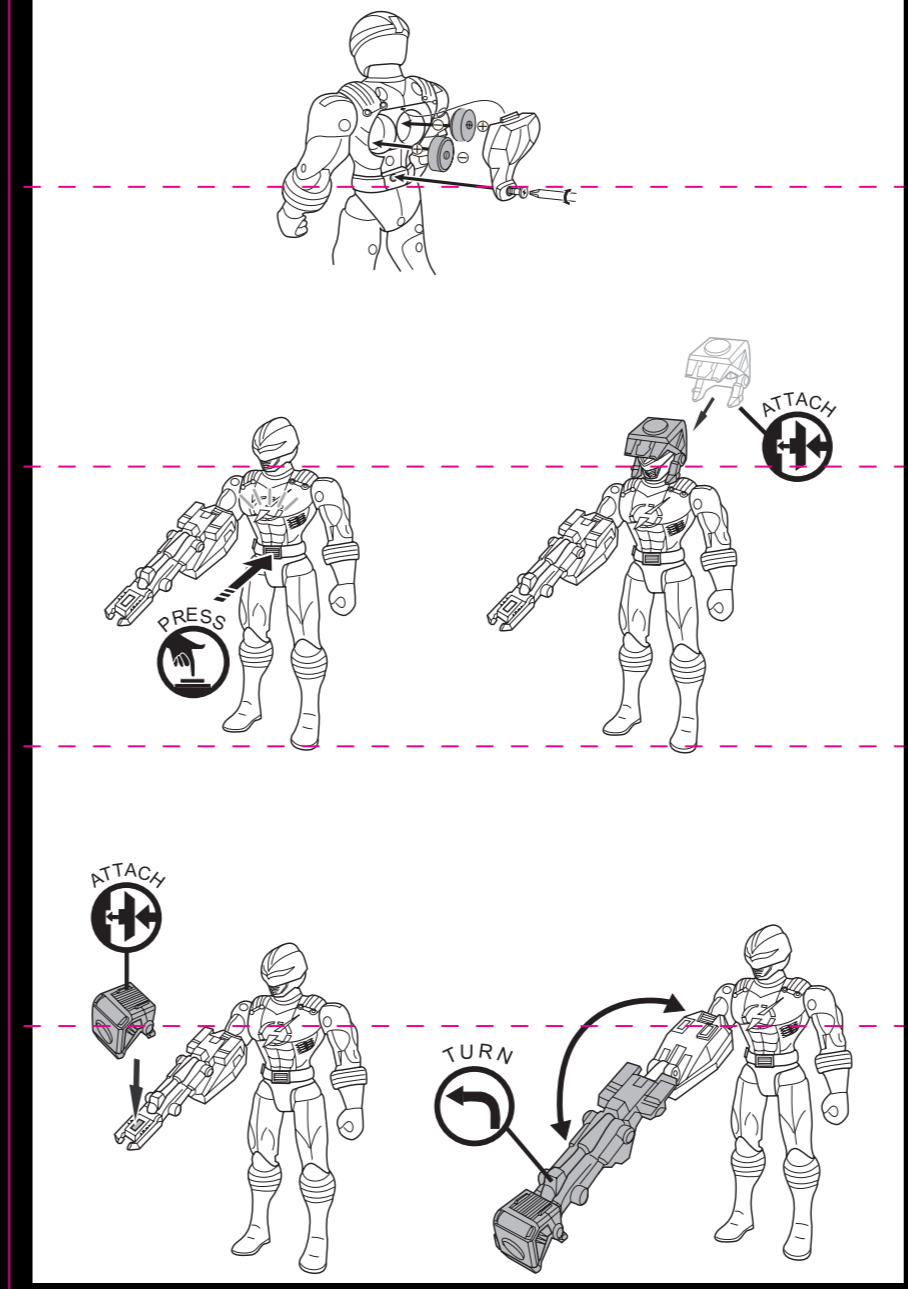


**WARNING:**  
CHOKING HAZARD - Small parts.  
Not for Children under 3 years.

**CAUTION: PLEASE READ BEFORE PLAYING WITH TOY**

 - Do not: 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone.
- Be careful not to pinch fingers with hinged parts of toy.

**CAUTION:** Keep batteries away from children. Batteries may be harmful if swallowed. Requires 2 LR44 batteries. Batteries included. **NOTE:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly.

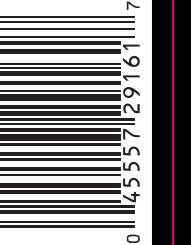

**HOW TO REPLACE BATTERIES**

- Use screwdriver (+) and turn counter-clockwise to remove battery cover as shown.
- To replace 2 LR44 batteries (batteries included). Note the battery polarity as shown.
- Fasten the lid with the screwdriver.

