

ACTIVATION


Now that you have your Tamagotchi device, you must do these three things:

1) Wake up Tamagotchi character from its million light year sleep by removing the insulating sheet (pull paper



2) RESET If necessary by pressing the reset switch on the back of the Tamagotchi device with a thin object like a pen or pencil point. Please do not press the reset switch RESET too hard, or you may damage the Tamagotchi device.

3) Adjust the time difference between Tamagotchi Planet and Earth (Timer Set). First press the middle button (B) to bring up the timer screen. Use the left button (A) to set the hours, and the middle button (B) to set the minutes. Once you have set the correct time, press the right button (C) to set the timer. Next, return to the main screen by pressing the middle button (B) again.

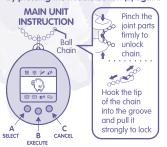


NOTE: AM/PM is set with the hour. Make sure you set AM for the morning and PM for the afternoon.

When you have completed these three steps, a pulsating egg will appear. Tamagotchi character will hatch in about 5 minutes

As soon as the Tamagotchi character hatches, it will beep at you for attention. This is where the health meter comes in handy. You can determine the mood. health and behavior of Tamagotchi character with the health meter.

Tamagotchi character will need to be fed and played with soon after it hatches. In order to start Tamagotchi character on a good growth path, you must take good care of Tamagotchi character right from the start.

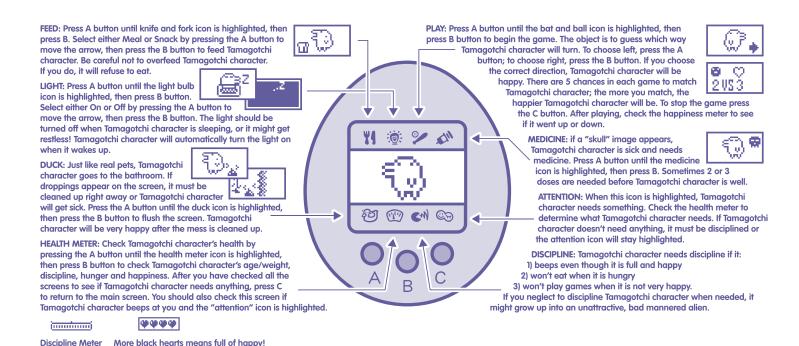

HAPPINESS AND HUNGER STATUS CHECK

There are a total of 4 hearts on the "Happy" and "Hungry" screens and they start out empty. The more hearts that are filled the more satisfied Tamagotchi character is.

You must feed and play with Tamagotchi character in order to fill the empty hearts. If you keep Tamagotchi character full and happy, it will grow

into a cute, happy cyberpet. If you neglect Tamagotchi character, it will grow into an unattractive alien.

tappy

DISCIPLINE STATUS CHECK

As the meter moves towards the right, it indicates you are raising a well-behaved Tamagotchi character.

The higher the discipline scale, the less trouble and better behaved Tamagotchi character will be. The key to increasing the discipline meter is to make sure you scold Tamagotchi character when necessary If Tamagotchi character beeps at you for no reason, you must discipline it.

Tamagotchi character needs discipline if it:

- · beeps at you even though it is full and happy
- won't eat when it is hungry
- won't play games when it is not very happy



AGE AND WEIGHT CHECK

Converts and displays Tamagotchi character's growth information in earth units. 141 5 02 百

maybe the hidden



BIOLOGY

- One earth day is equal to about one year for Tamagotchi character.
- Tamagotchi character will change appearance several times before it reaches its adult form.
- The shape, personality and life of each Tamagotchi character is based on how well you take care of it. Each time you hatch a new Tamagotchi character it could grow up to be any one of several adult forms.

Tamagotchi character will always return to its home planet. How well you care for it

helps determine how long Tamagotchi character will stay on Earth.

