



 
 
TAMAGOTCHI

INSTRUCTIONS

8+
#90996
#90997




1 MAIN UNIT INSTRUCTION

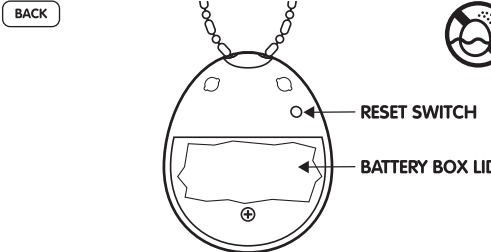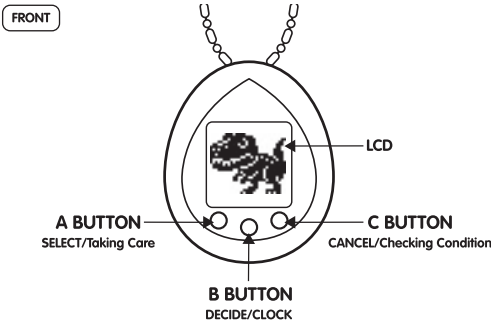

Please do not put Tamagotchi device in water as it may not work. Please avoid using or storing in humid places.

BALL CHAIN

Pinch the joint parts firmly to unlock chain.

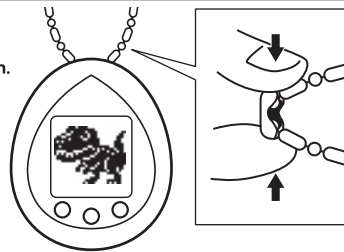

Hook the tip of the chain into the groove and pull it strongly to lock.




3 HOW TO TAKE CARE



CALL

When your dinosaur calls, press the A button and take care of it. If you don't notice the call, you can find out if you need to take care of it by pushing the C button. After taking care of it, you can still see your dinosaur reactions by pressing the C button. Reactions vary depending on which dinosaur you are raising.

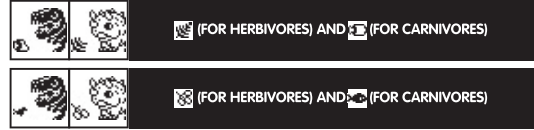

(FOR HERBIVORES) AND (FOR CARNIVORES)

If your dinosaur is hungry, press the A button to select "FOOD" from the selection screen and use the B button to choose. Then press the A button to select and the B button to decide. (If dinosaur is a carnivore, you will see instead.)

(FOR HERBIVORES) AND (FOR CARNIVORES)

If your dinosaur is feeling blue, press the A button to select "FOOD" from the selection screen and use the B button to choose. Then press the A button to select and the B button to decide. (If dinosaur is a carnivore, you will see instead.)

*Dinosaur will not eat when it is full, when it is about to leave, when it is asleep, when it gets sick, or when it is about to go on a journey.



A B

GAMES

If your dinosaur wants to play, press the A button to select "GAME" from the selection screen and use the B button to choose.

WHICH ONE?

Which egg has baby dinosaur inside? When the cursor is displayed, choose the egg that you guess baby dinosaur is in. (A button:Left, B button:Right.) If you win, the dinosaur cheers up!



ESCAPE!

Can the Jeep run away from the T.REX?! Help it to run away perfectly! Press the A button as much as possible in 8 seconds to help the Jeep run away! If you succeed, it will be able to escape perfectly. If you fail, it could be caught...



CATCH FOOD

Catch sharks coming from left side by pressing A or B button. A button>mosasaurus goes up, B button>mosasaurus goes down. If you catch all sharks, the dinosaur you take care of becomes happy. If you lose, the dinosaur you take care of becomes sad.



LIGHT


When your dinosaur sleeps, press the A button, select from the selection screen with the A button, decide with the B button to turn off the light. When your dinosaur sleeps, only ON/OFF of light, ON/OFF of sound, and clock display operations can be performed. You can't turn the light ON/OFF when your dinosaur is awake.



POOP

When your dinosaur poops, press the A button and flush it.

2

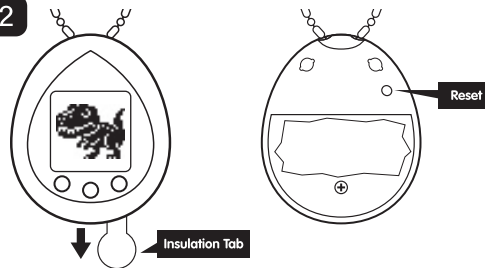

BIRTH OF THE DINOSAUR

1. PULL the insulation tab from side of Tamagotchi device.
2. RESET if necessary by pressing the reset switch on the back of the Tamagotchi device with a thin object like a pen or pencil point. Please do not press the reset switch too hard, or you may damage the Tamagotchi device.



3. SET CLOCK when hour is flashing, press the A button to select correct hour. Press the B button to confirm. When minute is flashing, press the A button to select correct minute. Press the B button to confirm. Press the C button to return to the previous selection.

- DINOSAUR WILL NOT APPEAR UNLESS YOU SET THE CLOCK.
- AM IN THE MORNING AND PM IN THE AFTERNOON. PLEASE BE CAREFUL NOT TO MAKE A MISTAKE!



4. When the clock is set, baby-dino is born in about a minute.

BABY-DINO GROWTH

Baby-dino grows into adult-dino. How you take care of your baby-dino determines which adult-dino it will be.

GROWTH CHART

Taking care of the dinosaur!

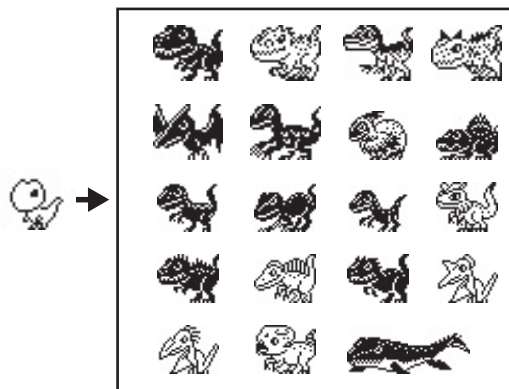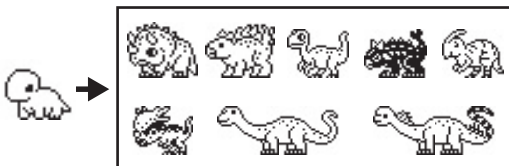



SICKNESS

Your dinosaur will become so sad and sick if you don't take care of it. Press the A button to cure it. If your dinosaur stays sick for too long, it will leave you.



FAREWELL

After 3 days of taking good care of Adult-dino, it will go on a journey to find the new place and you can raise new dinosaur.



HOW TO RAISE NEW DINOSAUR

If you press the A button while holding down the C button, the opening starts again.

4

CLOCK ●WHEN YOU WANT TO VIEW THE TIME

Press the B button when you see the Tamagotchi on the screen. Press the B button again to go back to the screen.

●WHEN YOU WANT TO SET THE TIME

Press and hold C button and press A button when you see clock on the screen. See section 2 SET CLOCK.

5


SOUND ON / OFF

Press the A and C button at the same time when you can see the Tamagotchi on the screen. Select sound ON or OFF with the A button and confirm with B button.

- You cannot change sound if you need to take care of Tamagotchi.
- Please be careful if you set OFF for sound, you will not hear Tamagotchi's warning (calling) sounds.

6

CHANGING BATTERIES

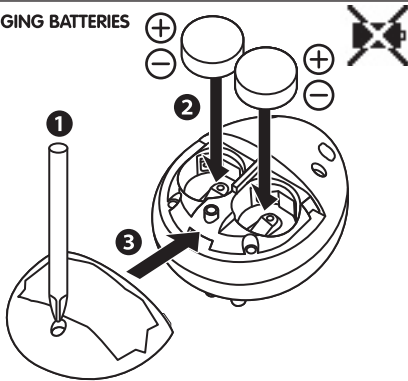

NOTE: when battery dies and you restart, you begin again with the birth of your Tamagotchi.

1. Using a screwdriver, remove bottom of device. Adult assembly required.
2. Take out old batteries, insert 2 new batteries (LR44, 1.5V) making sure to align "+" and "-" signs properly.
3. Replace battery box lid. Please "RESET" again.

- Please also "RESET" when operations don't work or when you see something wrong on the screen.
- Tamagotchi can't save data. Note that the history of play will reset if you change battery or reset.

• Parents and guardians: Please read this entire instruction sheet before allowing children to play.

MADE IN CHINA
Manufactured for Bandai Namco Toys & Collectibles America Inc., 23 Odyssey, Irvine, California 92618.

Actual size, color, style and decoration may vary. Bandai logo: © and © 2025 BANDAI. TAMAGOTCHI and all related logos, names and distinctive likenesses are the exclusive property of Bandai. © BANDAI. All Rights Reserved.

WARNING! Not suitable for children under 3 years. Small parts. Choking hazard. Colours, contents and decoration of contents may vary. Not all products may be available in your country. Retain packaging and instruction as it contains important information. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries. Only batteries of a recommended type or similar type shall be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. Supervise children if they are replacing batteries themselves to ensure these guidelines are followed. Store unused batteries in their packaging and away from metal objects which can cause a short-circuit. Caution: Keep batteries away from children. Batteries may be harmful if swallowed. Manufactured in China.

© Universal City Studios LLC and Amblin Entertainment, Inc. All Rights Reserved. Used Under License.

CAUTION: PLEASE READ BEFORE PLAYING WITH TOY
Do not 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, or 5) step on toy as it may result in serious injury.
• Be careful not to pinch fingers with hinged parts of toy.

WARNING! This product contains a button cell or a coin battery. A button cell or coin battery can cause serious internal chemical burns if swallowed.
WARNING: Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.