

BANDAI NAMCO

 
INSTRUCTIONS

BANDAI
 JACKINGBIRDS
 ATE THE SONGS
 OTHER BIRDS...



8+
 #90113
 NO I'VE NEVER
 HEARD COPYRIGH! FRUITLESS

Get ready for Snoopy!

Depending on how you care for him, Snoopy's outfit changes and Woodstock or Harriet might come to play!

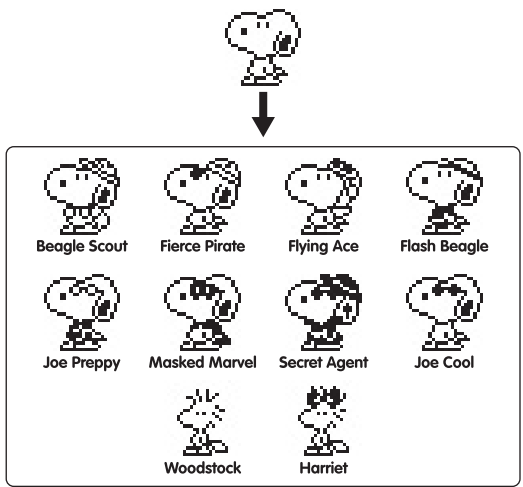


1 MAIN UNIT INSTRUCTION

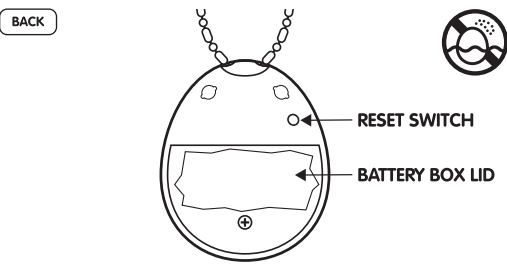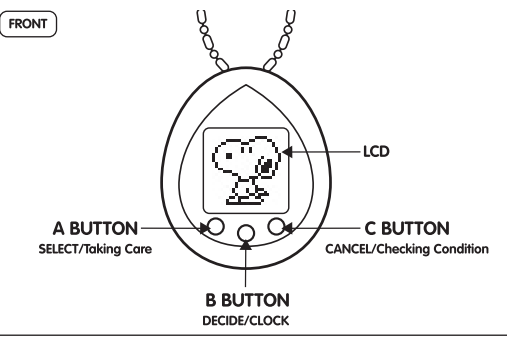  

Please do not put Tamagotchi device in water as it may not work. Please avoid using or storing in humid places.

BALL CHAIN

 
Pinch the joint parts firmly to unlock chain.

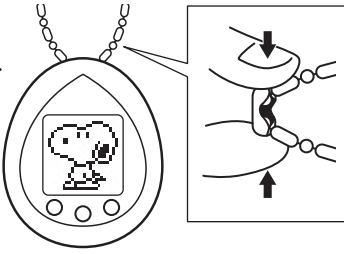

Hook the tip of the chain into the groove and pull it strongly to lock.



 2

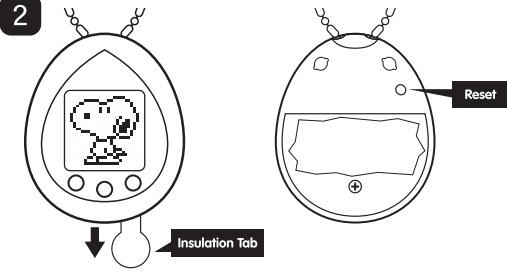

HOW TO START

- PULL** the shipping tab from side of Tamagotchi device.
- RESET** if necessary by pressing the reset switch on the back of the Tamagotchi device with a thin object like a pen or pencil point. Please do not press the reset switch too hard, or you may damage the Tamagotchi device.



- SET CLOCK:** when hour is flashing, press the A button to select correct hour. Press the B button to confirm. When minute is flashing, press the A button to select correct minute. Press the B button to confirm. Press the C button to return to the previous selection.

- SNOOPY WILL NOT APPEAR UNLESS YOU SET THE CLOCK.**
- AM IN THE MORNING AND PM IN THE AFTERNOON. PLEASE BE CAREFUL NOT TO MAKE A MISTAKE!**

4. Snoopy's warm and fuzzy life is about to begin. Please take care of him!

3 HOW TO TAKE CARE



CALL

When your character calls, please press the A button and take care of them. After taking care of your character, you can press the C button to see their reaction. Reactions vary depending on which character you are raising.



DOG FOOD/SEED

If your character is hungry, press the A button to select **FOOD** and the B button to decide. Then press the A button to select **MEAL** and the B button to decide.

DOUGHNUT/WATER

If your character is feeling blue, press the A button to select **SHACK** and the B button to decide.

 


GAMES

If your character wants to play, press the A button to select **GAME** from the selection screen and use the B button to decide.


WRITE THE Great American Novel

• Help Snoopy write!
 When Snoopy's finished writing his manuscript, press the A or B button. If you succeed, your character will be happy. If you fail, they will be sad.

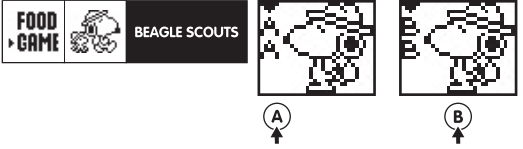

GO TO BEAGLE SCOUTING WITH WOODSTOCK AND FRIENDS!

 Follow Woodstock's instructions. Press the A button when he shows A, and the B button when he shows B. When AA or BB show up, press the buttons twice.

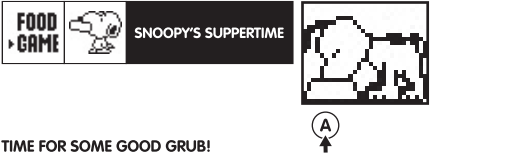

TIME FOR SOME GOOD GRUB!

Repeatedly press the A button when Snoopy is eating. If you don't press it enough, Lucy will interrupt the meal.



LIGHT

When your character sleeps, press the A button, select **SLEEP** from the selection screen with the A button, then decide with the B button when to turn off the light. When your character sleeps, only light ON/OFF, sound ON/OFF, and clock display operations can be performed. You can't turn the light ON/OFF when your character is awake.



RETURNING TO THE DOGHOUSE

If you don't take care of your character, they'll go back to the doghouse. Press the A button to call them back.



CHARACTERS LEAVING THE SCREEN

If you continue to neglect your characters, they will leave.



HOW TO TAKE CARE OF A NEW CHARACTER

If you press the A button while holding down the C button, the opening scenes starts again.

4

CLOCK

●WHEN YOU WANT TO VIEW THE TIME

Press the B button when you see the Tamagotchi on the screen. Press the B button again to go back to the screen.

●WHEN YOU WANT TO SET THE TIME

Press and hold C button and press A button when you see clock on the screen. See section 2 SET CLOCK.

• Parents and guardians: Please read this entire instruction sheet before allowing children to play.

MADE IN CHINA

Manufactured for Bandai Namco Toys & Collectibles America Inc., 23 Odyssey, Irvine, California 92618.

Actual size, color, style and decoration may vary. Bandai logo: ©and © 2025 BANDAI. TAMAGOTCHI and all related logos, names and distinctive likenesses are the exclusive property of Bandai. © BANDAI. All Rights Reserved.

5

SOUND ON / OFF



Press the A and C button at the same time when you can see the Tamagotchi on the screen. Select sound ON or OFF with the A button and confirm with B button.

 
- You cannot change sound if you need to take care of Tamagotchi.
- Please be careful if you set OFF for sound, you will not hear Tamagotchi's warning (calling) sounds.

WARNING! Not suitable for children under 3 years. Small parts. Choking hazard. Colours, contents and decoration of contents may vary. Not all products may be available in your country. Retain packaging and instruction as it contains important information. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries. Only batteries of a recommended type or similar type shall be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. Supervise children if they are replacing batteries themselves to ensure these guidelines are followed. Store unused batteries in their packaging and away from metal objects which can cause a short-circuit. Caution: Keep batteries away from children. Batteries may be harmful if swallowed. Manufactured in China.

© 2025 Peanuts Worldwide LLC
Used Under License.

6

CHANGING BATTERIES

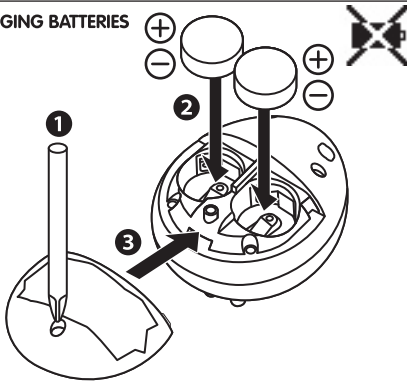

CAUTION: PLEASE READ BEFORE PLAYING WITH TOY

Do not 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, or 5) step on toy as it may result in serious injury.

- Be careful not to pinch fingers with hinged parts of toy.

WARNING! This product contains a button cell or a coin battery. A button cell or coin battery can cause serious internal chemical burns if swallowed.

WARNING: Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

NOTE: when battery dies and you restart, you begin again with the birth of your Tamagotchi.

1. Using a screwdriver, remove bottom of device. Adult assembly required.
2. Take out old batteries, insert 2 new batteries (LR44, 1.5V) making sure to align "+" and "-" signs properly.
3. Replace battery box lid. Please "RESET" again.

- Please also "RESET" when operations don't work or when you see something wrong on the screen.
- Tamagotchi can't save data. Note that the history of play will reset if you change battery or reset.