

BANDAI NAMCO

Instruction Manual  
SKU#88990(item#88991, 88992)

8-years old and above



# CHOPPERTCHI



©Eiichiro Oda/Shueisha, Toei Animation  
Distributed by Bandai Namco Toys & Collectibles  
America Inc., 23 Odyssey Irvine, CA 92618.  
Actual size, color, style and decoration may vary. Used  
under license by Bandai. Bandai Logo and TAMAGOTCHI:  
® & © 2023 BANDAI. TAMAGOTCHI and all related logos,  
names, and distinctive likenesses are the exclusive property  
of Bandai. All Rights Reserved. Package © 2023 BANDAI.  
Used under authorization.  
MADE IN CHINA

## Notice

Please read before use.

- The product is intended for ages 8 and older. Do not give the product to anyone below the specified age.

## Caution

Improper use of the battery may lead to overheating, exploding, and fluid leakage.  
Please see the following Caution content.

- Swallowing the button cell battery can be lethal. Do not store in a place that can be reached by children. If swallowed, please consult your doctor immediately.
- If battery liquids go into the eye, immediately contact a doctor. If battery liquids come in contact with skin or clothes, immediately wash with water.
- Please have the parents or guardians change the batteries.
- Please do not use old batteries with new batteries, or use different battery brands together.
- Please set the battery in its proper + and - position.
- Do not short-circuit, recharge, dismantle, heat, or place the battery into a fire.
- Please follow your local district and area rules when discarding the product or batteries.
- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.



Do not place in your mouth

## WARNING!

Contains Button Battery  
Button batteries are hazardous and can cause serious injuries if swallowed or placed inside any part of the body. Keep batteries away from children whether new or used. Dispose of used batteries immediately. If you think that batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention



### <Usage Warnings>

 
- We are not responsible for loss of data from use of the product.
- Discard plastic packaging immediately after opening.
- Do not place the product on resin treated products such as sofas, seats, and tiles. Long-term exposure may discolor the product.
- Do not forcibly pull or bend moveable parts or attachments.
- The battery included is only for demonstration purpose. Please replace the battery if the screen does not show properly.
- The product is composed of various electronic components. Do not drop, wet, dirty, or dismantle the product. Do not use or store the product under extreme temperatures.
- Please press the reset button if the product encounters an error.
- Clock precision: ±10 seconds daily

Please be careful not to place the Tamagotchi in your clothes and wear to avoid washing or drying of the product.



Do not douse the product in water or wet the product. Do not use or place the product in humid or high-moisture conditions.

## 1 Product Details

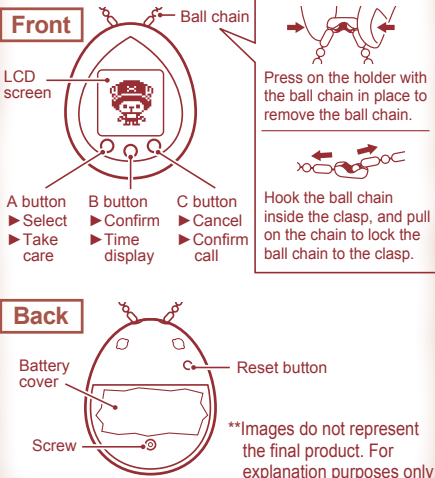


## 2 Chopper's Birth

- 1\_ Pull out the tab from the casing.  
▶ A sound will ring, and the time setting screen will appear.



 - 2\_ Reset instructions  
Press on the reset button on the back of the casing with a thin-tipped object to perform a reset.  
▶ A sound will ring if successful.



- 3\_ Setting the clock  
Use the A button to set the time in order of "hours"→"minutes".  
Use the B button to confirm the changes.  
Press the C button to return a step back.  
\*\*Be sure to set the time properly to "AM" or "PM".



- 4\_ Chopper's Birth  
Once the time is set, the goodbye scene with Hiriluk will start, and then Chopper will be born.



\*\*Do not press hard on the reset button using sharp objects, such as mechanical pencils, to prevent damage to the device.

\*\*Please press the reset button after changing the batteries.

\*\*Please refer to "Reset instructions" if the device or screen doesn't function properly.

\*\*There is no save function to the product. Please be warned that changing batteries or going through the "Reset instructions" will reset your current play data.

## 3 Clock Controls

### To view the time

Press the B button while the character is on screen to open the clock screen.  
Pressing the B button again will return you to the character display screen.

### To adjust the time

Press the B button to transition to the clock screen, then press the A button while the C button is pressed to transition to the clock setting screen.  
To set the time, please follow the instructions under "Setting the clock" (see "2. Chopper's Birth").

## 4 Turning the sound on and off

Press the A button while the C button is pressed during the character display screen to transition to the sound select screen. Use the A button to select between "ON" or "OFF" then press the B button to confirm the change.



\*\*Please be warned that turning the sound "OFF" will prevent the character call from making a sound.

 
## 5 Changing Batteries

Low batteries may cause the screen to go blank and may lead to control loss. Please replace the batteries when the replace battery icon is displayed.



- 1\_ Remove the battery cover located on the back of the device.

- ①-1 Use and turn a screwdriver in the direction of the arrow.
- ①-2 Remove battery cover.

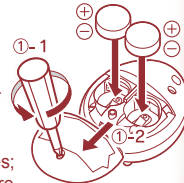

- 2\_ Remove the batteries and replace them with new batteries (2 x LR44 batteries; sold separately) making sure that the ⊕ and ⊖ of the batteries are properly set.

\*\*Always replace both batteries at the same time.

- 3\_ While making sure the hook of the cover is properly set on the back of the device, turn the screwdriver in the opposite direction as ①-1 to close the cover.

After replacing the batteries please reset the device. (see "2. Chopper's Birth")

## 6 How to take care of Chopper

### Call

When Chopper calls for you, you will need to take the proper action depending on the state of Chopper.

If you miss a call from Chopper, press the C button to confirm Chopper's status.



### Meat on the Bone

If Chopper is hungry, press the A button to open the menu screen, then press the A button to scroll to [ 🍖 ] → [ 🍖 ] and B button to confirm, to feed Chopper a Meat on the Bone.

\*\*You cannot feed Chopper when he is full, hiding behind a tree, sleeping, or pouting.



### Cotton Candy

If Chopper is unhappy, press the A button to open the menu screen, then press the A button to scroll to [ 🍭 ] → [ 🍭 ] and B button to confirm, to feed Chopper a Cotton Candy.

\*\*You cannot feed Chopper when he is hiding behind a tree, sleeping, or pouting.



### Lights

When Chopper sleeps, press the A button to open the menu screen, then press the A button to scroll to [ 💡 ] and B button to confirm, to turn off the lights.

 
(When Chopper is sleeping, the only options available are, Lights options, clock controls, and sound controls.)



### Hiding Behind a Tree

Chopper will periodically hide behind a tree. Chopper will hide deeper behind a tree as time passes. Give him Hearts by pressing the A button to show him love.

\*\*You cannot give him hearts when he is sleeping or pouting.



### Mini Game

Play the two mini games.

Press the A button to open the Menu, then press the A button to select [ 🎮 ] and B button to confirm.

Choose one of the two games by pressing A button and B button to confirm.

\*\*You cannot play Mini Games when Chopper is hiding behind a tree, sleeping, or pouting.



### Mini Game/Cotton Candy Catch

Move Chopper around to catch the falling Cotton Candy. (A button: left, B button: right) Catch 20 Cotton Candies to get a perfect.

It will be considered a fail if you catch a Chili or miss a Cotton Candy.



### Pouting

If Chopper hides behind a tree for too long or isn't taken care of sufficiently, he will pout. Press the A button continuously to make him happy again.

If he pouts for too long, he will leave.

(When Chopper is pouting, the only options available are clock controls and sound controls.)



### Mini Game/Scope

When both of Chopper's hands meet with the Scope in the middle, press the button (A button or B button).

If pressed at the right time, it is a success.

Get 5 successes to get a perfect.

It will be considered a fail if the button is pressed when the hands are not at the center.



### The Straw Hats come to visit!

At certain times, members of the Straw Hat Crew will come visit.

Within the three minutes they are on screen, pressing the A, B, or C button might play a special animation.

\*\*If three minutes pass or if no special animation is played after pressing a button, it will return back to the normal screen.



### Good Bye/Adventure

If Chopper is left pouting for a long time or is put in the pouting state too many times, he will be put on the Wanted list by the Marines and you will have to say good bye.



On the other hand, if Chopper is raised to his New World saga state, he may say "thank you," [ 🙏 ] and leave on an adventure.



 
**After Chopper leaves, to start raising another Chopper...**

Press the A button while pressing the C button.

This will replay the goodbye scene with Hiriluk, and then Chopper will be born.


After saying bye to Hiriluk, you will start with

### Super Rookies Saga Chopper!

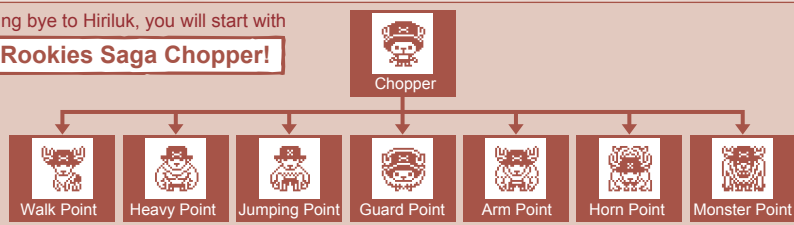

Raise Super Rookies Saga Chopper for a while and... He might grow into

### New World Saga Chopper!

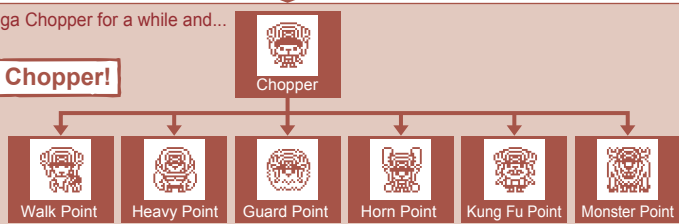 

Reach certain criteria and you might see a super rare...

### Pirate Chopper?!

