



Demon Slayer Tamagotchi

Hashira Model

©Koyoharu Gotoge / SHUEISHA, Aniplex, ufotable
© & © 2021 BANDAI
MADE IN CHINA
Manufactured for Bandai America Incorporated,
2120 Park Place, Suite 120, El Segundo, California 90245
Actual size, color, style and decoration may vary.
Bandai logo: © & © 2021 BANDAI Package: © 2021 BANDAI



6-years-old and above



Notice

Please read before use.

- The product is intended for ages 6 and older. Do not give the product to anyone below the specified age.



Cautions

<Improper use of the battery may lead to overheating, exploding, and fluid leakage.

Please see the following Cautions content.>

- Swallowing the coin cell battery can be lethal. Do not store in a place that can be reached by children. If swallowed, please contact a doctor immediately.
- Please have the parents or guardians change the batteries.
- Do not mix alkaline, standard carbon-zinc or rechargeable batteries, or different type of batteries. Do not mix new and used batteries. Remove batteries when not in use or discharge.
- Please set the battery in its proper + and - position.
- Do not short-circuit, recharge, dismantle, heat, or place the battery into a fire.
- Please follow your local district and area rules when discarding the product or batteries.



Do not place in your mouth

<Usage Warnings>


- We are not responsible for loss of data from use of the product.
- Discard plastic packaging immediately after opening.
- Do not place the product on resin treated products such as sofas, seats, and tiles. Long-term exposure may discolor the product.
- Do not forcibly pull or bend moveable parts or attachments.
- The battery included is only for temporary use. Please replace the battery if the screen does not show properly.
- The product is composed of various electronic components. Do not drop, wet, dirty, or dismantle the product. Do not use or store the product under extreme temperatures.
- Please press the reset switch if the product encounters an error.
- Clock precision: ±10 seconds daily



Do not douse the product in water or wet the product. Do not use or place the product in humid or high-moisture conditions.

Please be careful not to place the "Demon Slayer Tamagotchi" in your clothes and wear to avoid washing or drying of the product.

1 Product Details

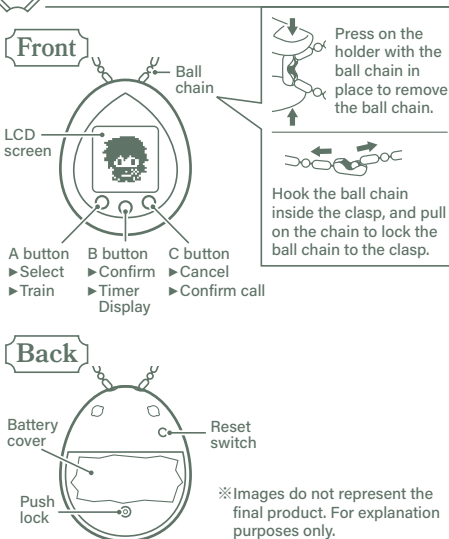

2 Climbing the Demon Slayer Corps Ranks

1_ Pull out the tab from the casing.

→ A sound will ring, and the time setting screen will appear.

2_ Reset instructions

Press on the reset switch on the back of the casing with a tipped object to do a reset.

→ A sound will ring if successful.

※Do not press hard on the reset switch using pointed objects, such as mechanical pencils, to prevent damage to the device.

※Please press the reset switch after changing the batteries.



3_ Setting the timer

Use the A button to set the time in order of "hours" → "minutes". Use the B button to confirm the changes. Press the C button to return a step back.

4_ Climb the ranks - Kinoe

Once the timer is set, the Breathing Style used by the Hashira on the casing design will appear. Pressing the A, B, or C buttons will display a number of demons, starting from the rank of "Kinoe". Your mission is to train the Demon Slayer so they can fight the demons.



※Please refer to "Reset instructions" if the device or screen doesn't function properly.

※There is no save function to the product. Please be warned that changing batteries or going through the "Reset instructions" will reset your current play data.

3 Timer Controls

To view the time

Press the B button during the Demon Slayer display screen to transition to the timer screen. Press the B button again to return to the Demon Slayer display screen.

To adjust the time

Press the B button to transition to the timer screen, then press the A button while the C button is pressed to transition to the timer setting screen. To set the time, please follow the instructions under "Setting the timer" (see "2. Climbing the Demon Slayer Corps Ranks").

4 Turning the sound on and off

Press the A button while the C button is pressed during the Demon Slayer display screen to transition to the sound select screen. Use the A button to select between "ON" or "OFF" then press the B button to confirm the change.

※Please be warned that turning the sound "OFF" will prevent the Demon Slayer call from ringing.



5 Changing batteries

Low batteries may cause the screen to go blank and may lead to loss of controls. Please replace the batteries when the battery exchange icon is displayed.




1_ Slide the battery cover downward (IMAGE 2) while pressing down on the push lock on the back (IMAGE 1) using a pointed object.

2_ Remove the batteries and replace them with new batteries (2 × LR44 batteries; sold separately) making sure that the ⊕ and ⊖ of the batteries are properly set.

※Always replace both batteries at the same time.

3_ Always go through the "Reset instructions" (see "2. Climbing the Demon Slayer Corps Ranks") after the battery cover is placed back into its closed position.

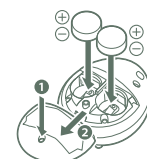


6 Train your Demon Slayer

Call

You will need to take the proper action depending on the state of the Demon Slayer when you are called. In case you do not notice the Demon Slayer's call, press the C button to confirm the state of the Demon Slayer.


Rice Ball

If the Demon Slayer is hungry, press the A button to open the select screen, then use the A button to select , and press the B button to give the rice ball to the Demon Slayer.

※You cannot give a Rice Ball to the Demon Slayer when a demon is present, or when the Demon Slayer is sleeping, injured, or is about to die.




Green Tea

If the Demon Slayer is unhappy, press the A button to open the select screen, then use the A button to select , and press the B button to give the Demon Slayer some green tea.

※You cannot give Green Tea to the Demon Slayer when a demon is present, or when the Demon Slayer is sleeping, injured, or is about to die.

Lights

When the Demon Slayer goes to sleep, press the A button to open the select screen, then use the A button to select  (OFF) and the B button to turn the lights off. (You cannot control anything other than turning the lights on or off, displaying and fixing the time, or turning the sound on or off while the Demon Slayer is asleep.)

※You cannot turn the lights on or off while the Demon Slayer is awake.



Missions

After a certain amount of time passes, a demon will appear after you receive a mission from a Kasugai crow. The demon will slowly take over the screen. Press the A button to slay the demon before it takes over the screen completely.

※You cannot slay the demon if your Demon Slayer is asleep, injured, or is about to die.


There are 3 different demons, and 1 of them will randomly appear to attack the Demon Slayer.



Be careful, as the demons are very active during the night.



Training

Training is needed to become a powerful Demon Slayer. From the select screen, use the A button to choose , then use the A button to select one of the three training methods and the B button to confirm the selection.

※You cannot train when a demon has appeared, or when your Demon Slayer is asleep, injured, or is about to die.



Training Physical Training

Press the A button or the B button the moment "!" appears. The training is a success if you can catch Aoi. Capture Aoi 5 times to get a perfect result. You cannot catch Aoi while she is on the left or right of the screen, or if you do not press the button when the "!" is on screen.



Training Boulder Lifting

Repeatedly press the A button for 15 seconds. The boulders will lift if pressed a sufficient number of times. If the button is not pressed enough times, the boulders will drop and result in a fail.



Training Total Concentration: Constant

Quickly press the buttons as displayed on the screen. If there are two A buttons or B buttons displayed, press the displayed button twice. The training is a success if you followed the orders on screen correctly. Follow the orders 5 times right to get a perfect result. You will be whacked if you don't follow the orders on the screen, or if you do not press the A button or the B button.



Injury

The Demon Slayer will be injured if the demon is left alone or if you do not train the Demon Slayer. If injured, press the A button until the Demon Slayer fully recovers. If left injured, the Demon Slayer may die, so please be careful.

※You cannot display or fix the time, or turn the sound on or off while the Demon Slayer is injured.

※All controls are inaccessible if the Demon Slayer is about to die.



Death

The Demon Slayer will die if left injured or is injured a number of times. Kakushi will appear upon death to clear the area.

→ How to train a new Demon Slayer

Press the A button while the C button is pressed to train a new Demon Slayer who will rise to the rank of Kinoe. Please do your best to lead and train the Demon Slayer.



Updates

You may receive an update from a Kasugai crow on how things are faring around the area. Once you have checked the update, press the A button, B button, or the C button to continue.



The Demon Slayer can become a variety of Breathing Style user depending on the training!



You may be asked by a certain Demon Slayer to train another Demon Slayer...