



DEMON SLAYER TAMAGOTCHI



©Koyoharu Gotoge / SHUEISHA, Aniplex, ufotable
 © Bandai, WIZ
 MADE IN CHINA
 Manufactured for Bandai America Incorporated,
 2120 Park Place, Suite 120, El Segundo, California 90245
 Actual size, color, style and decoration may vary. Bandai logo: ® and © 2020
 Bandai. Package: © 2020 Bandai.

Age 6+

INSTRUCTION SHEET

⚠ Caution

- If you use the battery incorrectly, it may cause heat generation, damage, or leakage.
- If the fluid leaking from the battery gets into your eyes, immediately wash your eyes with a lot of water and consult a doctor. If it gets on your skin or clothes, wash it with water.
- Only use batteries of the same or equivalent type as indicated. Batteries must be inserted with the correct polarity.
- Do not short-circuit the supply terminals. Do not mix alkaline, standard carbon-zinc or rechargeable batteries, or different type of batteries. Do not mix new and used batteries. Remove batteries when not in use or discharge.
- Store unused batteries in their packaging and away from metal objects which can cause a short-circuit.
- This product is made precisely. It may be damaged if excessive force is applied or dropped.



Do not put in mouth



Do not submerge the product in water or operate it with wet hands as it may cause malfunction. Also, please avoid using it in a humid place.


As the device is small, be careful to not leave the device in your pocket when washing clothes.

<<Precautions>>

- Please note that we cannot cover loss of data.
- Discard plastic packaging immediately after opening.
- Do not place this product on a resin sofa, seat, tile, etc. The color may transfer if you are in contact for a long time.
- Do not pull or bend the moving part or the mounted part in an unreasonable direction.
- The set batteries are for testing. If the screen display becomes difficult to see, replace all button batteries with new ones.
- This product is composed of precision electronic components. Do not drop it, wet it with water, stain it, or disassemble it. Also, avoid using or storing in places with high or low temperatures.
- If it malfunctions, press the reset switch and turn on the power again.
- Clock accuracy: Within ± 10 seconds per day.
- Please be aware that some of the Japanese pronunciations may have different intonations or may be difficult to hear due to the characteristics of the product.




Device Instructions

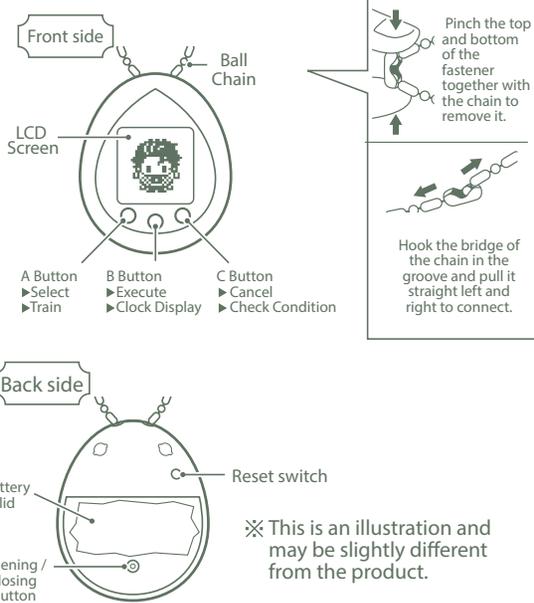

Join the Demon Slayer Corps

1. Remove the insulation sheet from the bottom of the main unit. A beep sounds and the clock setting screen appears.
2. <How to Reset>
Press the reset switch on the back of the main unit with a thin stick. A beep sounds.
Do not press the reset switch strongly with a sharp stick or the lead of a mechanical pencil. There is a risk of damage.
Be sure to press the reset switch after replacing the batteries.

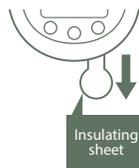

3. <Clock Settings>
Select the current time by pressing the A button in the order of "hour" to "minute". Confirm with the B button. Press C to return to the previous selection.



"AM" means morning and "PM" means afternoon.

4. <Join the Demon Slayer Corps>
When the clock setting is completed, the screen will show passing the Final Selection. After that, enlistment in the Demon Slayer Corps is approved and uniforms are provided.



- ※ Please reset if the screen appears strange or it malfunctions.
- ※ This product can not save data when you change the battery or reset. The history of play so far will be reset, so please be careful.

三 Clock

How to display the clock.

Press B on the Demon Slayer display screen to display the clock screen. Press B again to return to the Demon Slayer display screen.

How to adjust the clock.

Press the B button to display the clock screen, and press the A button while holding down the C button to display the clock setting screen. After that, it is the same as <Clock Setting> in the "Join the Demon Slayer Corps" section.

四 Turn Sound On / Off


When the A button is pressed while holding down the C button on the Demon Slayer display screen, the sound ON / OFF selection screen is displayed. Select (ON) or (OFF) with the A button. Press the B button to confirm. Be careful, as there are no alerts when the sound is off.

五 Replacing Batteries

When the batteries are exhausted, the LCD screen becomes difficult to see, and then all operations are disabled. If the Battery Low Icon appears, replace with new batteries.



- While pressing the opening / closing protrusion on the back of the main unit with a thin object (Fig. 1), open it by sliding down the battery lid (Fig. 2).

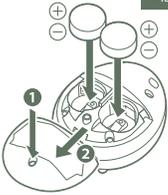

- Take out the exhausted battery and set a new button battery (LR44 x 2, sold separately) so that the + and - are not mistaken. Be sure to replace both of them.
- Close the battery lid.

Be sure to reset by following directions in <How to Reset> in the "Join the Demon Slayer Corps" section.

六 How to Raise your Demon Slayer

Calling Out

If your Demon Slayer calls out to you, it is necessary to take appropriate measures that match their condition. If you notice the call, you can check their condition by pressing the C button.



Green Tea

If your Demon Slayer is in a bad mood, press the A button, select from the menu, and give your Demon Slayer green tea by pressing B. ※Your Demon Slayer cannot drink green tea when a demon appears, when they're asleep or injured, or directly before death.



Rice Ball

If your Demon Slayer is hungry, press the A button, select from the menu, and give your Demon Slayer a rice ball by pressing B.



Light

When your Demon Slayer falls asleep, press the A button, select (OFF) from the menu, and turn off the lights by pressing B. (When your Demon Slayer is asleep, the only operations that can be performed are turning ON/OFF the lights, displaying and adjusting the clock, and turning ON/OFF the sound.) ※You cannot turn the lights ON/OFF when your Demon Slayer is awake.



Mission

After a set amount of time, a Kasugai Crow or Chuntaro will bring a mission, and a demon will appear. As time passes, the demon will take over the screen. Defeat the demon by pressing A before it takes over the whole screen.

※You cannot defeat a demon that has appeared if your Demon Slayer is asleep, is injured, or is directly before death.



One of four demons will attack at random.



Please note that demons become more active at night.

Training

Training is required to become a good Demon Slayer.

Press the A button, select , select one of the three training options, and confirm with B.

※Your Demon Slayer cannot train when a demon appears, when they're asleep or injured, or directly before death.



Training_[Splitting Stones]

When the sword reaches the center of the stone, press the A or B button. If successful, the stone will split. Split all 5 stones for a PERFECT. You will fail if you press a button too early or too late.

Training_[Gourd Breaking]

Press the A button repeatedly for 15 seconds. After a large number of presses, the gourd will break. The gourd will not yield without enough presses. Be sure to press the button firmly.



Training_[Medicated Water]

Quickly press the A or B button as they are displayed on screen. (If two of the same letter is displayed, press it twice) You will succeed if you press the correct buttons. Correctly press 5 times for a PERFECT.

If you press the wrong button or do not press a button, you will fail and will be splashed with medicated water.



Injury

If you let demons keep attacking, or you do not care for your Demon Slayer, your Demon Slayer will become injured.

Press the A button multiple times to heal your Demon Slayer until they are fully recovered. Be aware that if you keep your Demon Slayer injured for a long time, they will die.

※When your Demon Slayer is injured, the only operations you can perform are displaying and adjusting the clock or turning the sound ON/OFF.
 ※You cannot perform any operations directly before your Demon Slayer's death.



Death

If your Demon Slayer remains injured for too long or is injured too many times, they will die.

▶To raise a new Demon Slayer, press the A button while holding the C button. It will start over from Final Selection. You can now raise a new Demon Slayer.

Recent Reports

Sometimes a Kasugai Crow will bring you a report from something happening elsewhere. After reviewing the report, press the A, B, or C button.



Grow into various Breath Users depending on your training!

