

IMPORTANT

Please read before use.

The product is intended for ages 6 and older. Please do not give the product to anyone under the specified age noted.



Do not douse the product in water or wet the product.

Do not wash the product in the clothes pocket.

WARNINGS


(The product is composed of various electronic components. Do not drop, wet, dirty, or dismantle the product. Do not use or store the product under extreme temperatures.)

- Button cell batteries are dangerous if swallowed. Keep out of the reach of children. If swallowed, consult a physician immediately.
- Please have a parent or guardian replace the batteries.
- Please do not use old batteries with new batteries, or use different battery brands together.
- Please set the batteries in their proper + and - position.
- Do not short-circuit, recharge, dismantle, heat, or place the batteries into a fire.
- Please follow your local district and area rules when discarding the product or batteries.

<Usage Warnings>

- We are not responsible for loss of data from use of the product.
- Discard plastic packaging immediately after opening.
- Do not place the product on resin treated products such as sofas, seats, and tiles. Long-term exposure may discolor the product.
- The product is made using various parts. Please be wary that applying force or dropping the product may damage the product.
- The batteries included in the package are for testing. When the screen display becomes difficult to see, please replace all batteries with new ones.
- The product is composed of various electronic components. Do not drop, wet, dirty, or dismantle the product. Do not use or store the product under extreme temperatures.
- Please press the reset switch if the product encounters an error.
- Watch Accuracy: +/-10 seconds per day

1 Product Details

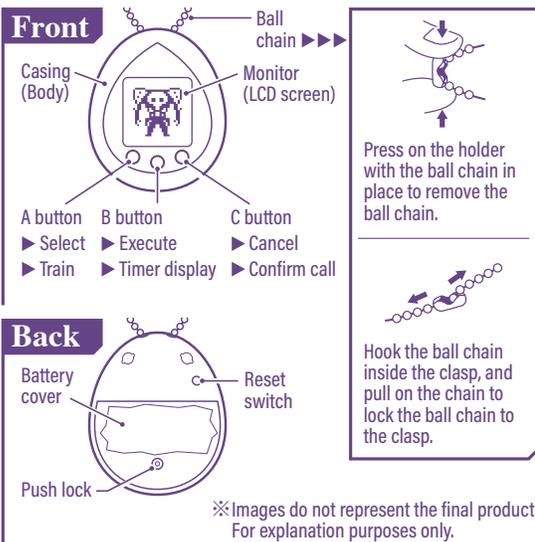

2 The Angel Awakens

1 Pull on the tab from the bottom of the casing.

▶ The timer setting screen will appear after a long beep.

2 [HOW TO RESET]

Press on the reset switch on the back of the casing with a tipped object.

▶ A long beep will play.

※ Do not press hard on the reset switch using pointed objects, such as mechanical pencils, to prevent damage to the device.

※ Please press the reset switch after changing batteries.



3 [SETTING THE TIMER]

Use button (A) to set the time in order of “hours” → “minutes”. Use button (B) to execute the changes. Press button (C) to return a step back.

4 [THE ANGEL AWAKENS]

Once the timer is set, the Angel will appear as a fetus hardened with bakelite, and will immediately break out of its containment to begin its growth.



※ Please go through the [HOW TO RESET] instructions if the device or screen doesn't function properly.

※ There is no save function to the product. Please be warned that changing batteries or going through the [HOW TO RESET] instructions will reset your current play data.

3 Timer Controls

■ To view the time

Press button (B) during the Angel display screen to transition to the timer screen.

Press button (B) again to return to the Angel display screen.

■ To adjust the time

Press button (B) to transition to the timer screen, then press button (A) while button (C) is pressed to transition to the timer setting screen.

To set the time, please follow the instructions under [SETTING THE TIMER] (see “2. The Angel Awakens”).

4 Turning the sound on and off

Press button (A) while button (C) is pressed during the Angel display screen to transition to the sound select screen.

Use button (A) to select between “ON” or “OFF” then press button (B) to execute the change.

※ Please be warned that turning the sound “OFF” will prevent the Angel's call from ringing.



5 Changing batteries

Low batteries may cause the screen to go blank and may lead to loss of controls. Please replace the batteries when the low battery icon is displayed.


1 Slide the battery cover downward (IMAGE 2) while pressing down on the push lock on the back (IMAGE 1) using a pointed object.

2 Remove the batteries and replace them with new batteries (2 x LR44 batteries; sold separately) making sure that the ⊕ and ⊖ of the batteries are properly set.

※ Always replace both batteries at the same time.

3 Always go through the [HOW TO RESET] instructions (see “2. The Angel Awakens”)

after the battery cover is placed back into its closed position.

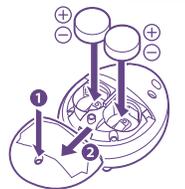

6 Train your Angel

CALL

You will need to take the proper action depending on the state of the Angel when it calls for you.

In case you do not notice the Angel's call, press button (C) to confirm the state of the Angel.

S2ENGINE

If the Angel needs energy, press button (A) to open the select screen, then use button (A) to select "ENERGY" → "S2ENGINE", and press button (B) to feed the Angel.

※You cannot give S2ENGINE to the Angel when its energy is at max, when the L.C.L. is corrupt, when it's in its cocoon stage or is sleeping, while the A.T. Field is up, or before its death.



WATERMELON (スイカ)

If the Angel is unhappy, press button (A) to open the select screen, then use button (A) to select "ENERGY" → "Watermelon", and press button (B) to feed the Angel.

※You cannot give Watermelon to the Angel when the L.C.L. is corrupt, when it's in its cocoon stage or is sleeping, while the A.T. Field is up, or before its death.



SIMULATION

Press button (A) to open the select screen, then press button (A) to select "SIMULATION" then any one of the choices available, and press button (B) to start the simulation.

The Angel may go through changes depending on the simulation results.

▶ [BATTLE TRAINING]

Control the cursor (button (A) to left / button (B) to right) to avoid the falling Spear of Longinus ↓ and N² bombs ↑. Avoid them 10 times in a row to get a perfect result.

▶ [TARGET SWITCH (目標をセンターに入れてスイッチ)]

Time and press the switch (button (A) or button (B)) when the moving ↙ and ↘ center each other. Time the press correctly 5 times to get a perfect result.

※You cannot play SIMULATION when the L.C.L. is corrupt, when the Angel is in its cocoon stage or is sleeping, while the A.T. Field is up, or before the Angel's death.



CORRUPT L.C.L.

Press button (A) when the L.C.L. is corrupt to clean the L.C.L..

※You cannot clean the L.C.L. when the L.C.L. is not corrupt, when the Angel is in its cocoon stage or is sleeping, while the A.T. Field is up, or before the Angel's death.



POWER TRANSMISSION SYSTEM (電力伝送システム)

Press button (A) when the Angel is asleep to open the power transmission system screen, then press button (A) to select "OFF" and press button (B) to turn off the power.

※You can only turn the power transmission system "ON" or "OFF", display or adjust the timer, and turn the sound "ON" or "OFF" while the Angel is asleep.

※You cannot turn the power transmission system "ON" or "OFF" while the Angel is awake, or when the Angel is in its cocoon stage.



A.T. FIELD

The Angel will activate its A.T. Field when it is kept unhappy for an extended period.

If that happens, please press button (A) until the A.T. Field disappears.

Please be careful as the Angel risks a higher chance of death the longer it keeps its A.T. Field active.

※You can only display or adjust the timer, turn the sound "ON" or "OFF", confirm calls, and turn the power transmission system "ON" or "OFF" when the Angel is asleep, while the A.T. Field is active.

※All controls are inaccessible if the Angel is about to die.



COCOON STAGE

The Angel will go through a transformation after a few hours have elapsed from its cocoon stage.

Press button (A) to initiate the transformation.

※You can only display or adjust the timer, and turn the sound "ON" or "OFF" while the Angel is in its cocoon stage.



ANGEL'S DEATH

The Angel will die if it is not kept in good condition.



THE HUMAN INSTRUMENTALITY PROJECT

The project will reach its fruition if the Angel is successfully trained and kept alive.

▼▼▼ To Retrain Another Angel ▼▼▼


Press button (A) while button (C) is pressed to gain a new Angel in its fetus state that has been hardened with bakelite.

MIXED SIGNALS

We received report of images other than the Angel appearing on the monitor when certain conditions have been met. If the monitor receives mixed signals, press any of the buttons (A, B, or C) to restore the monitor to its usual state.

TRANSFORMATION

Angels go through various transformations. What it becomes depends on how it was raised.

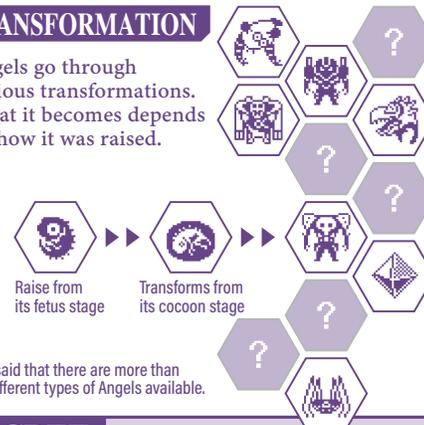

It is said that there are more than 20 different types of Angels available.

SECRET

The following are believed to be the conditions that affect the Angel's transformation.

- ▶ Number of times you respond to its calls
- ▶ The length of its cocoon stage
- ▶ Number of times SIMULATION was played