

HELLO KITTY[®] Tamagotchi

 
INSTRUCTIONS





8+ #42890
#42895

GROWTH CHART

If you meet specific conditions, Tamagotchi character can get a bow from Hello Kitty.

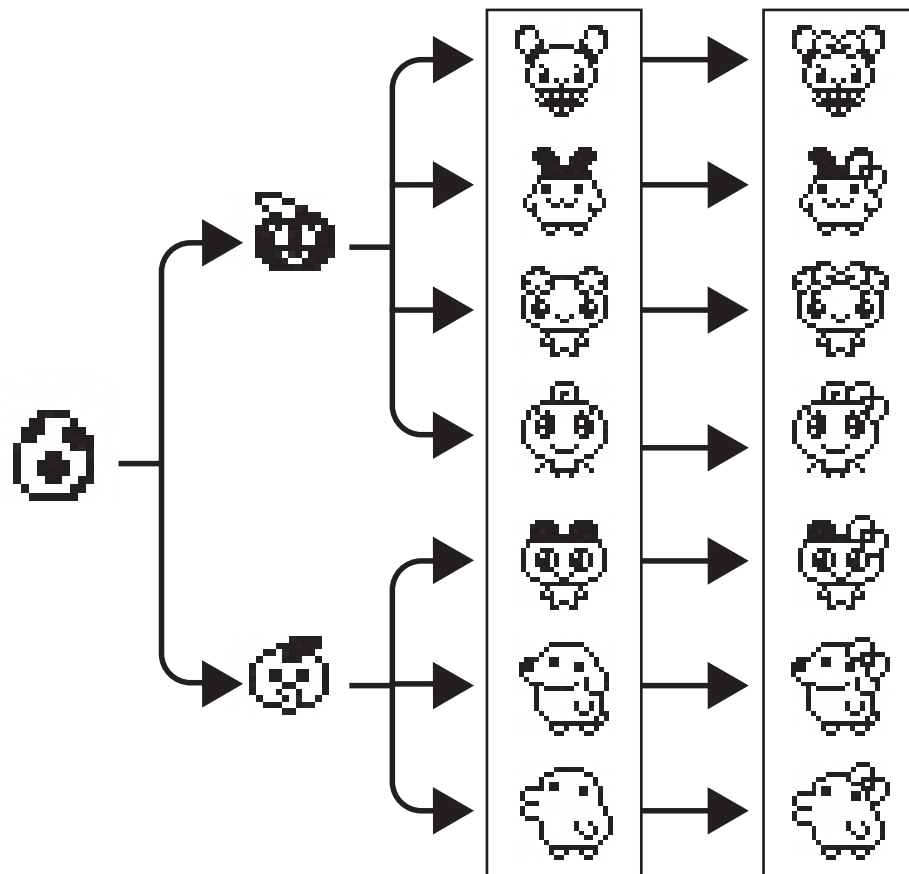


1 MAIN UNIT INSTRUCTION

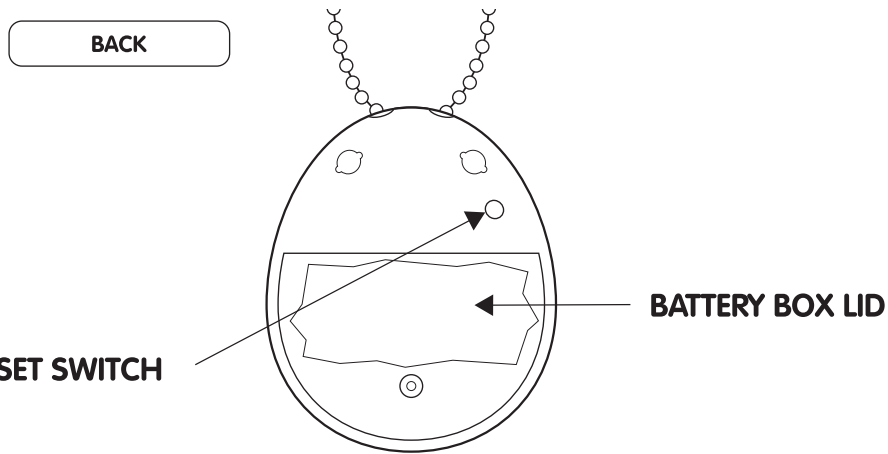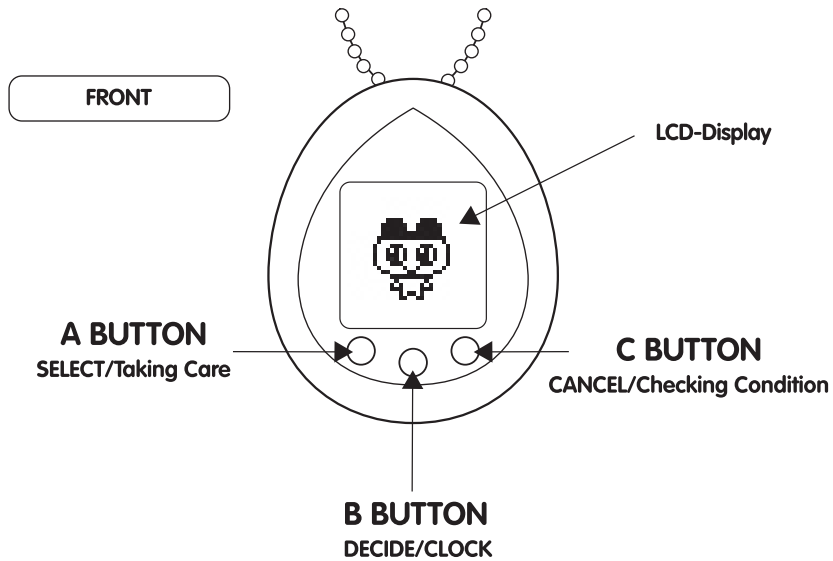  

Please do not put Tamagotchi device in water as it may not work. Please avoid using or storing in humid places.

2

 
Ball Chain

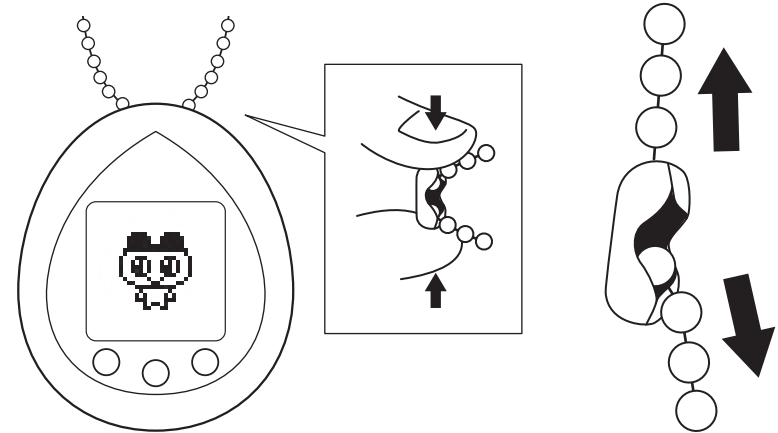

Pinch the joint parts firmly to unlock chain.

Hook the tip of the chain into the groove and pull it strongly to lock.

 
2 BIRTH OF TAMAGOTCHI

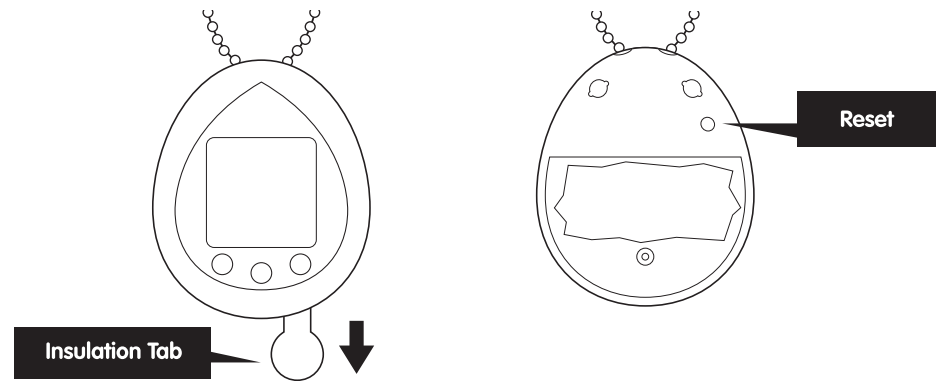


1. **PULL OUT** the insulation tab from side of Tamagotchi device.
2. **RESET** If necessary by pressing the reset switch on the back of the Tamagotchi device with a thin object like a pen or pencil point. Please do not press the reset switch too hard, or you may damage the Tamagotchi device.

3. SET CLOCK when hour is flashing, press the A button to select correct hour. Press the B button to confirm. When minute is flashing, press the A button to select correct minute. Press the B button to confirm. Press the C button to return to the previous selection.

 - **TAMAGOTCHI CHARACTER WILL NOT BE BORN UNLESS YOU SET THE CLOCK!!!**
- **AM IN THE MORNING AND PM IN THE AFTERNOON. PLEASE BE CAREFUL NOT TO MAKE A MISTAKE!**

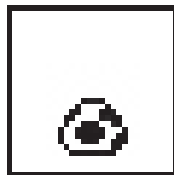

 4. TAMAGOTCHI CHARACTER BIRTH When the clock is set, Tamagotchi character is born in about a minute.

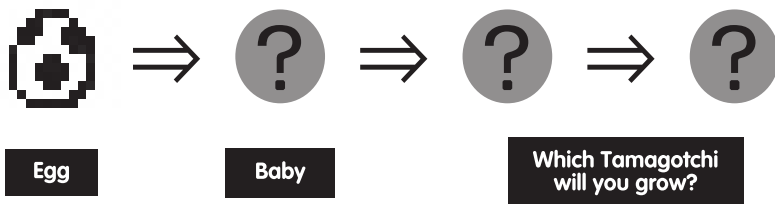

TAMAGOTCHI CHARACTER GROWTH

Tamagotchi character grows while transforming into various characters. How you take care of your Tamagotchi character determines which character it will be.

3 HOW TO TAKE CARE



Hungry



Bad Mood

CALL

When Tamagotchi character calls, please press the A button and take care of it. If you do not notice the call, you can find out if you need to take care of it by pushing the C button. After taking care of it, you can still see Tamagotchi character's reactions by pressing the C button. Reactions vary depending on which Tamagotchi character you are raising.





Eating




Cheer up!

APPLE PIE

If Tamagotchi character is hungry, press the A button to select  and the B button to decide. Then press the A button to select  and the B button to decide.

• **Tamagotchi character will not eat when it is full or when it is asleep.**


MILK

If Tamagotchi character is feeling blue, press the A button to select  and the B button to decide.



Piano Game

 
GAMES




If Tamagochi character wants to play, press the A button to select  from the selection screen and use the B button to decide.

Piano Game

• Play the piano with Hello Kitty ♪

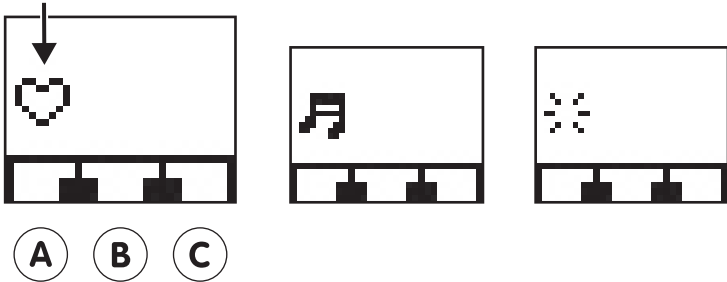Hearts fall on the left, middle and right of the keyboard, so press A, B and C buttons (as shown below) to play. Press the buttons at the moment the heart touches the keyboards. If you succeed, the heart will turn into a musical note. If you get it wrong five times, it's game over! To interrupt a game, press the A and C buttons simultaneously.



Great success	 ≧ 2
Success	 ≧ 4
Failure	 ≧ 5

 



 



Balloon Game

Balloon Game

• Keep flying!

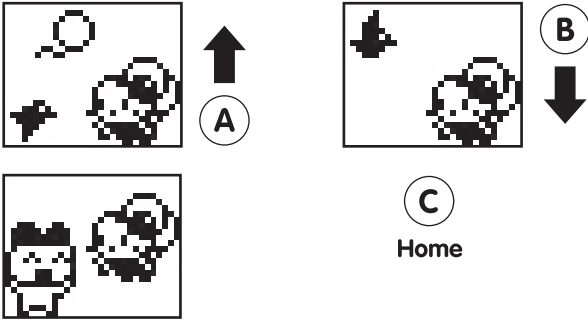Keep flying by pushing the A button! Grab balloons while avoiding crows. You can control how high Hello Kitty flies. Hello Kitty moves up when you push the A button and back down when you push the B button. If Hello Kitty hits a crow, one of the balloons break. Hello Kitty can have up to two balloons. Keep at least one balloon and win the game!



balloon	
crow	
Great success	
Success	
Failure	



LIGHT

When Tamagotchi character sleeps, press the A button, select OFF from the selection screen with the A button, decide with the B button to turn off the light. When Tamagotchi character sleeps, only ON/OFF of light, ON/OFF of sound, and clock display operations can be performed. You can't turn the light ON/OFF when Tamagotchi Character is awake.



FAREWELL

If you keep taking good care of your Tamagotchi character, Tamagotchi character will go on a journey to London with Hello Kitty!



CLEANING!

When Joey makes the room dirty, press the A button and call Hello Kitty to clean it!



SICK!

Your Tamagotchi character get sick if you don't take care of Tamagotchi character. Press A button to cure it. Be careful if Tamagotchi character stays sick for a long time as Tamagotchi character will die.



SAD

Your Tamagotchi character is sad if the "Sad mark" appears. Please press the A button twice to make it happy. Be careful as it will run away from home if it is sad for too long time.

- You can't do operations other than checking the time, turning the sound ON/OFF or pressing the C button when it's sad.



HOW TO RAISE NEW TAMAGOTCHI CHARACTER

If you press the A button while holding down the C button, Tamagotchi character will be born in about a minute!

4 CLOCK

● WHEN YOU WANT TO VIEW THE TIME

Press the B button when you see the Tamagotchi character on the screen. Press the B button again to go back to the screen.

● WHEN YOU WANT TO SET THE TIME

Press and hold C button and press A button when you see clock on the screen. See section 2 SET CLOCK.

 
5 SOUND ON / OFF



Press A and C button at the same time when you can see the Tamagotchi character on the screen. Select sound ON or OFF with the A button and confirm with B button.

- You cannot change sound if you need to take care of Tamagotchi character.
- Please be careful if you set OFF for sound, you will not hear Tamagotchi character's warning (calling) sounds.

6 CHANGING BATTERIES

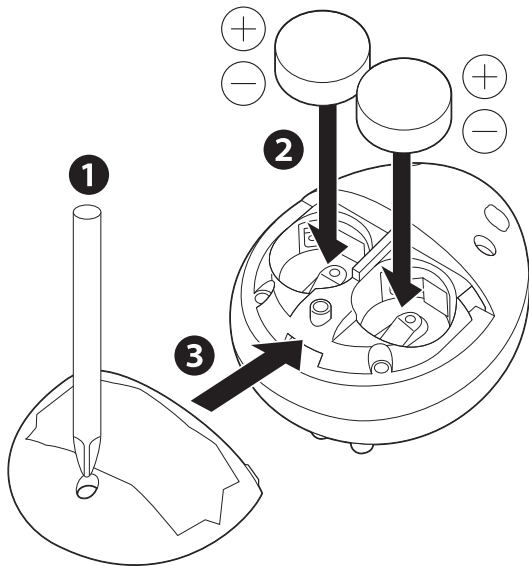

NOTE: when battery dies and you restart, you begin again with the birth of your Tamagotchi character.

1. Using a screwdriver, remove bottom of device. Adult assembly required.
2. Take out old batteries, insert 2 new batteries (LR44, 1.5V) making sure to align "+" and "-" signs properly.
3. Replace battery box lid. Please "RESET" again.

● Please also "RESET" when operations don't work or when you see something wrong on the screen.

● Tamagotchi can't save data. Note that the history of play will reset if you change battery or reset.

• Parents and guardians: Please read this entire instruction sheet before allowing children to play.

MADE IN CHINA Manufactured for Bandai America Incorporated, 2120 Park Place, Suite 120, El Segundo, California 90245.

Actual size, color, style and decoration may vary. Bandai logo: ® and © 2020 Bandai. TAMAGOTCHI and all related logos, names and distinctive likenesses are the exclusive property of Bandai. © BANDAI, WiZ. All Rights Reserved.

WARNING! Not suitable for children under 3 years. Contain small parts which can be swallowed. Colours, contents and decoration of contents may vary. Not all products may be available in your country. Retain packaging as it contains important information. Only use batteries of the same or equivalent type as indicated. Batteries must be inserted with the correct polarity (see diagram). Do not short-circuit the supply terminals. Do not attempt to recharge non-rechargeable batteries. Rechargeable batteries must be taken out of the toy before being recharged. Rechargeable batteries must be charged under adult supervision. Do not mix different battery types or new and used batteries. Remove dead batteries from the toy and all batteries from the toy if you do not use it for a long time. Supervise children if they are replacing batteries themselves to ensure these guidelines are followed. Store unused batteries in their packaging and away from metal objects which can cause a short-circuit. Caution: Keep batteries away from children. Batteries may be harmful if swallowed. Manufactured in China. Imported and distributed in UK by : Bandai UK Ltd, 37-39 Kew Foot Road, Richmond, TW9 2SS, UK. For further information email: support@bandai.co.uk or online at www.bandai.co.uk

MADE IN CHINA

©1976, 2020 SANRIO CO., LTD.

Used Under License.

CAUTION: PLEASE READ BEFORE PLAYING WITH TOY

Do not 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, or 5) step on toy as it may result in serious injury. • Be careful not to pinch fingers with hinged parts of toy.



**BANDAI S.A.S. Tour W 102 Terrasse Boieldieu
92085 Paris La Défense Cedex FRANCE**

In order to protect the environment, please do not dispose of this product with your household waste. Please dispose of it at a designated collection facility in your area.