BANDAI NAMCO

POMPOMPURIN Tamagotchi

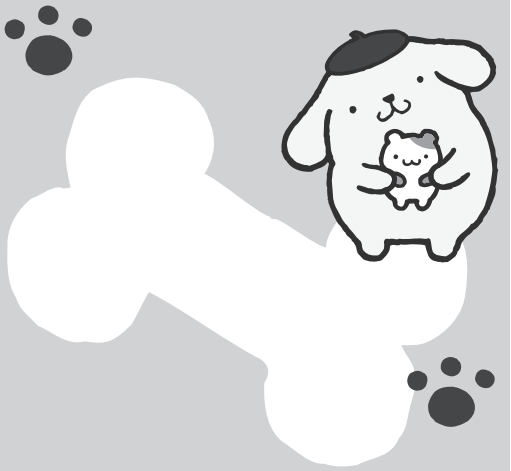

INSTRUCTIONS

8+

#91005
#91006
#91007
B1L (GB)

©BANDAI
© 2026 SANRIO CO., LTD. TOKYO, JAPAN Ⓛ

GROWTH CHART

If you meet special conditions, your Tamagotchi character will wear a costume that looks like Pompompurin!

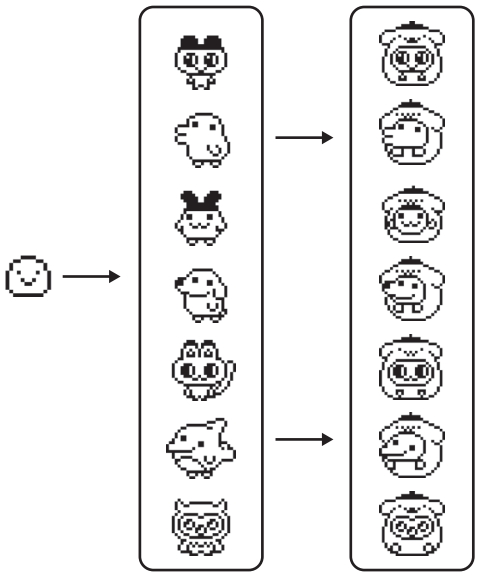

1 MAIN UNIT INSTRUCTION

FRONT

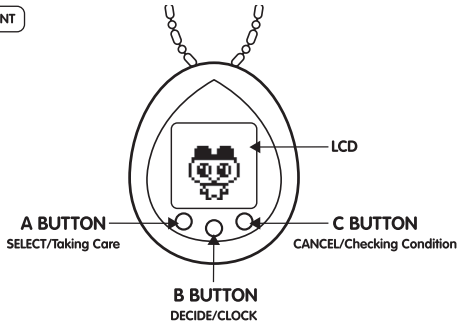

BACK

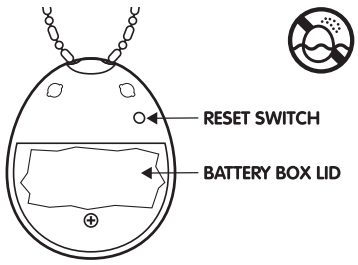

Please do not put Tamagotchi device in water as it may not work. Please avoid using or storing in humid places.

BALL CHAIN

Pinch the joint parts firmly to unlock chain.

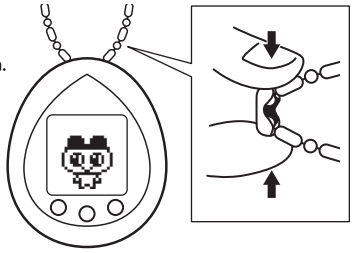

Hook the tip of the chain into the groove and pull it strongly to lock.

2

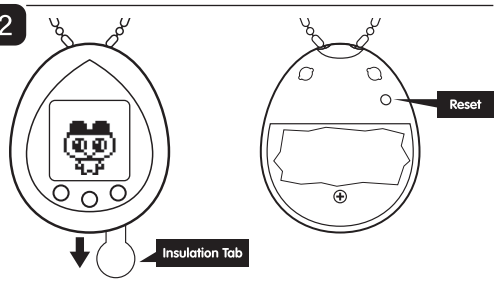

BIRTH OF TAMAGOTCHI

1. **PULL** the shipping tab from side of Tamagotchi device.
2. **RESET** if necessary by pressing the reset switch on the back of the Tamagotchi device with a thin object like a pen or pencil point. Please do not press the reset switch too hard, or you may damage the Tamagotchi device.

3. **SET CLOCK** when hour is flashing, press the A button to select correct hour. Press the B button to confirm. When minute is flashing, press the A button to select correct minute. Press the B button to confirm. Press the C button to return to the previous selection.

- **TAMAGOTCHI CHARACTER WILL NOT BE BORN UNLESS YOU SET THE CLOCK!!!**
- **AM IN THE MORNING AND PM IN THE AFTERNOON. PLEASE BE CAREFUL NOT TO MAKE A MISTAKE!**

4. **TAMAGOTCHI CHARACTER BIRTH** When the clock is set, Tamagotchi character is born in about a minute.

3 HOW TO TAKE CARE

CALL

When Tamagotchi character calls, please press the A button and take care of it. If you do not notice the call, you can find out if you need to take care of it by pushing the C button. After taking care of it, you can still see Tamagotchi character's reactions by pressing the C button. Reactions vary depending on which Tamagotchi character you are raising.

PUDDING

If Tamagotchi character is hungry, press the A button to select and the B button to decide. Then press the A button to select and the B button to decide.

- **Tamagotchi character will not eat when it is full or when it is asleep.**

MILK

If your Tamagotchi character is feeling blue, press the A button to select and confirm with the B button.

GAMES

If Tamagochi character wants to play, press the A button to select from the selection screen and use the B button to decide.

DANCING♪

Certain buttons will be indicated while Muffin is dancing. Press the corresponding buttons quickly. (If the button is indicated once, press it once; if it's indicated twice, press it twice.) Correctly press the buttons five times to win! You lose the game if you press a different button than instructed, or don't press a button at all.

ACORN PICKING

Move Scone to collect the acorns that Pompompurin drops. (Press the A button to move Scone up, and press the B button to move him down.) Collect ten acorns to win! You'll lose if you miss all of the acorns.

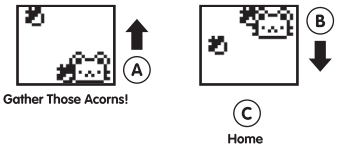

COOKING

When Bagel is cooking a hotcake, a "!" mark will appear in the upper right. When you see it, press the A or B button quickly. If you press it in time, Bagel will flip the hotcake. Flip the hotcake five times to win! You lose the game if you press a button when there is no "!" mark, or if you don't press a button quickly enough when "!" appears.



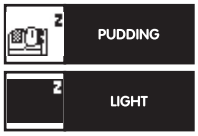

LIGHT

When Tamagotchi character sleeps, press the A button, select OFF from the selection screen with the A button, decide with the B button to turn off the light. When Tamagotchi character sleeps, only ON/OFF of light, ON/OFF of sound, and clock display operations can be performed. You can't turn the light ON/OFF when Tamagochi Character is awake.

LEAVING ON A JOURNEY

Once a Tamagotchi is fully grown and a certain amount of time passes, they'll go out on their own. Receiving a special flower from Pompompurin will cause your Tamagotchi to leave on a journey, so don't forget to say goodbye!

CLEANING!

When the room is dirty, press the A button and call Pompompurin to clean it!

SICK!

Your Tamagotchi character gets sick if you don't take care of Tamagotchi character. Press A button to cure it. Be careful if Tamagotchi character stays sick for a long time as Tamagotchi character will die.

SAD

Your Tamagotchi character is sad if the "Sad mark" appears. Please press the A button twice to make it happy. Be careful as it will run away from home if it is sad for too long time.

• You can't do operations other than checking the time, turning the sound ON/OFF or pressing the C button when it's sad.

HOW TO RAISE NEW TAMAGOTCHI CHARACTER

If you press the A button while holding down the C button, Tamagotchi character will be born in about a minute!

4

CLOCK

●WHEN YOU WANT TO VIEW THE TIME

Press the B button when you see the Tamagotchi on the screen. Press the B button again to go back to the screen.

●WHEN YOU WANT TO SET THE TIME

Press and hold C button and press A button when you see clock on the screen. See section 2 SET CLOCK.

5

SOUND ON / OFF

Press the A and C button at the same time when you can see the Tamagotchi on the screen. Select sound ON or OFF with the A button and confirm with B button.

•You cannot change sound if you need to take care of Tamagotchi.

•Please be careful if you set OFF for sound, you will not hear Tamagotchi's warning (calling) sounds.

6 CHANGING BATTERIES

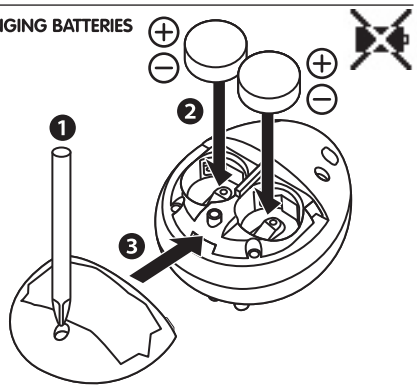

NOTE: when battery dies and you restart, you begin again with the birth of your Tamagotchi.

1. Using a screwdriver, remove bottom of device. Adult assembly required.
2. Take out old batteries, insert 2 new batteries (LR44, 1.5V) making sure to align "+" and "–" signs properly.
3. Replace battery box lid. Please "RESET" again.

● Please also "RESET" when operations don't work or when you see something wrong on the screen.

● Tamagotchi can't save data. Note that the history of play will reset if you change battery or reset.

Parents and guardians: Please read this entire instruction sheet before allowing children to play.

MADE IN CHINA
Manufactured for Bandai Namco Toys & Collectibles America Inc., 23 Odyssey, Irvine, California 92618.

Actual size, color, style and decoration may vary. Bandai logo: ® and © 2025 BANDAI. TAMAGOTCHI and all related logos, names and distinctive likenesses are the exclusive property of Bandai. © BANDAI. All Rights Reserved.

WARNING! Not suitable for children under 3 years. Small parts. Choking hazard. Colours, contents and decoration of contents may vary. Not all products may be available in your country. Retain packaging and instruction as it contains important information. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries. Only batteries of a recommended type or similar type shall be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. Supervise children if they are replacing batteries themselves to ensure these guidelines are followed. Store unused batteries in their packaging and away from metal objects which can cause a short-circuit. Caution: Keep batteries away from children. Batteries may be harmful if swallowed. Manufactured in China.

© 2026 SANRIO CO., LTD. TOKYO, JAPAN Ⓛ
Used Under License.

CAUTION: PLEASE READ BEFORE PLAYING WITH TOY

Do not 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, or 5) step on toy as it may result in serious injury.

• Be careful not to pinch fingers with hinged parts of toy.